

GRID COMPASS OWNER'S GUIDE

August 23, 1983

Order Number 1101-40

Errata

For GRiD Compass Owner's Guide

Figure 3-12. on page 21 is incorrect. Please replace this figure with the one shown below.

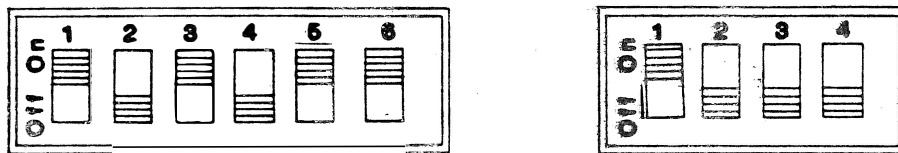


Figure 3-12. Switch Settings for Epson Printers

COPYRIGHT (C) 1983 GRiD Systems Corporation
2535 Garcia Avenue
Mountain View, CA 94043
(415) 961-4800

Manual Name: GRiD COMPASS OWNER'S GUIDE
Order Number: 1101-40
Issue date: August 23, 1983

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without the prior written permission of GRiD Systems Corporation.

The information in this document is subject to change without notice.

NEITHER GRiD SYSTEMS CORPORATION NOR THIS DOCUMENT MAKES ANY EXPRESSED OR IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. GRiD Systems Corporation makes no representation as to the accuracy or adequacy of this document. GRiD Systems Corporation has no obligation to update or keep current the information contained in this document.

GRiD Systems Corporation's software products are copyrighted by and shall remain the property of GRiD Systems Corporation.

UNDER NO CIRCUMSTANCES WILL GRiD SYSTEMS CORPORATION BE LIABLE FOR ANY LOSS OR OTHER DAMAGES ARISING OUT OF THE USE OF THIS MANUAL.

The following are trademarks of GRiD Systems Corporation: GRiD, GRiD Compass, Compass Computer, GRiD Server.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS. YOU WILL BE DEEMED TO HAVE ACCEPTED THESE TERMS AND CONDITIONS IF YOU HAVE NOT RETURNED THE PRODUCT WITH YOUR PROOF OF PURCHASE TO YOUR GRiD DEALER, WITHIN 5 DAYS OF THE DATE OF PAYMENT.

The term "Products", as used herein, means hardware, hardware parts and documentation sold by GRiD.

1. Warranty

GRiD warrants that the Products sold hereunder shall be free from defects in materials and workmanship for a period of 90 days after delivery. Defective Products will be repaired or replaced, at GRiD's option, by GRiD during the warranty period. You shall notify GRiD of the defective Product within the 90 day period, obtain a Product Repair Order and return the Product to GRiD along with proof of purchase data. If this Product is delivered by mail, you agree to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location and to use the original shipping container or equivalent. Contact an authorized GRiD Systems dealer or write to: GRiD Systems Corporation, Customer Service Center, 2535 Garcia Avenue, Mountain View, California 94043 for further information.

You are responsible for removing any data or programs or keeping backup copies prior to returning Products to GRiD. GRiD shall not be liable for loss of data contained in any returned equipment.

This warranty is not valid if the Products have been abused, misused, altered, neglected, or if repairs are attempted by unauthorized personnel.

EXCEPT AS PROVIDED ABOVE, GRiD MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

2. Limitation of Liability

IN NO EVENT WILL GRiD BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED. GRiD'S LIABILITY UNDER OR FOR BREACH OF THIS AGREEMENT SHALL BE LIMITED TO REFUND OF THE PURCHASE PRICE.

3. General

You shall not assign this Agreement nor any rights hereunder without the prior written consent of GRiD. GRiD reserves the right to withhold such consent for any reason whatsoever. Subject to the foregoing, this Agreement shall bind and inure to the benefit of the respective parties hereto and their heirs, personal representatives, successors and assigns.

The Terms and Conditions of this Limited Warranty and Limitation of Liability and of the Class A Software License Agreement represent the

entire Agreement between GRiD and you relating to products purchases and software licensing and may only be modified in writing, signed by both parties.

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS.

CONTENTS

PREFACE

viii

CHAPTER 1: GETTING TO KNOW YOUR GRiD COMPASS

Checking the Contents of the Box	1
The Top View	2
The Rear View	2
On/Off Switch	3
Power Cord Socket	3
Line Voltage Switch	3
Fuse	4
Serial Connector	4
Telephone Connectors	5
GPIB Connector	5

CHAPTER 2: SETTING UP THE GRiD COMPASS

Starting Up Your GRiD Compass	7
The Keyboard	10
Closing Up Your GRiD Compass	11

CHAPTER 3: CONNECTING PERIPHERALS TO YOUR GRiD COMPASS

Choosing the GPIB or Serial Connector	13
Connecting Peripherals to the GPIB Connector	14
Connecting Peripherals to the Serial Connector	16
Connecting the 2101 Disk System	17
Connecting the 2102 Portable Diskette Drive	18
Connecting the Epson Printers	20
Connecting the Diablo Printers	22
Connecting the Hewlett-Packard Plotters	24

CHAPTER 4: USING THE MODEM AND TELEPHONE HANDSET

What Is a Modem?	27
Notifying the Telephone Company	28
Connecting the Telephone Line	29

Adjusting the Speaker Volume	30
The Telephone Handset	30
CHAPTER 5: TROUBLESHOOTING	
Identifying the Problem	33
User Errors in Setting Up the GRiD Compass	33
Software or Hardware Problems	34
Dealing with Radio Frequency Interference	35
CHAPTER 6: MAINTENANCE	
General Warnings	37
Cleaning Your GRiD Compass	38
Storing Your GRiD Compass	38
Traveling with Your GRiD Compass	39
Updating the Clock	39
APPENDIX: TESTING THE MODEM	A-1
INDEX	I-1

LIST OF FIGURES AND TABLES

Figure 1-1.	Contents of Box	1
Figure 1-2.	Top View of the GRiD Compass	2
Figure 1-3.	Rear View of the GRiD Compass	3
Figure 1-4.	Computer Line Voltage Settings	4
Figure 2-1.	GRiD Compass Keyboard	11
Figure 3-1.	Peripherals Connected to GPIB Connector	14
Figure 3-2.	Peripherals Connected to Serial Connector	14
Figure 3-3.	GPIB Cable Connects Compass to 2101 Disk System	15
Figure 3-4.	Three Peripherals Connected to GRiD Compass	15
Figure 3-5.	Two Connected GPIB Cables	16
Figure 3-6.	Serial Cable Connects GRiD Compass to Diablo 620 Printer	16
Figure 3-7.	Front and Rear Views of the 2101 Disk System	17
Figure 3-8.	Switch Settings for Disk System	18
Figure 3-9.	Front and Rear Views of the 2102 Portable Diskette Drive	19
Figure 3-10.	Switch Settings for Portable Floppy	19
Figure 3-11.	Front and Rear Views of the Epson MX-82 Printer	20
Figure 3-12.	Switch Settings for Epson Printers	21
Figure 3-13.	Paper Aligned in Epson Printer	22
Figure 3-14.	Front and Rear Views of the Diablo 620 Printer	23
Figure 3-15.	Switch Settings for Diablo Printers	23
Figure 3-16.	Paper Aligned in Diablo Printer	24
Figure 3-17.	Front and Rear Views of the Hewlett-Packard 7470A Plotter	25
Figure 3-18.	Switch Settings for Hewlett-Packard Plotters	26
Figure 4-1.	Communication Inside and Outside the GRiD Family of Products	28
Figure 4-2.	GRiD Compass Connected to Phone Jack	29
Figure 4-3.	Phone and Modem Connected to Telephone System	30
Figure 4-4.	Telephone Handset Connected to GRiD Compass	31
Figure 4-5.	Handset Resting on Cradle	32
Table 5-1.	Troubleshooting Chart	34

PREFACE

This manual introduces you to the GRiD Compass. It shows how to set up your GRiD Compass, and gives the basics of how to operate it.

Once you have a basic understanding of the GRiD Compass, you will be ready to use one of the software applications. To become familiar with the software, see Getting Started with the GRiD Compass.

CHAPTER 1: GETTING TO KNOW YOUR GRiD COMPASS

This chapter introduces you to your GRiD Compass™. It lists the accessories included with your GRiD Compass and gives a detailed description of the top and rear views of the computer.

CHECKING THE CONTENTS OF THE BOX

Figure 1-1 shows the parts included in each shipping carton.

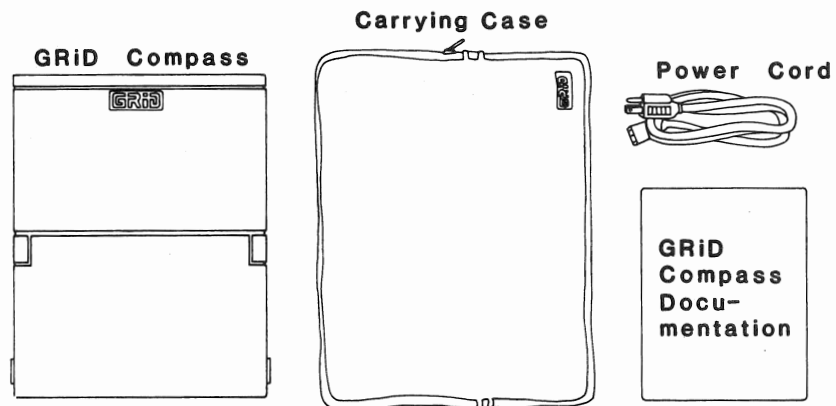


Figure 1-1. Contents of Box

Check for shipping damage or missing parts. If there are any problems, contact a GRiD representative or the store where you purchased your GRiD Compass.

Keep the shipping carton and use it to return your GRiD Compass should it need service.

THE TOP VIEW

The top view of the GRiD Compass is shown in Figure 1-2. Note that the GRiD logo is on the top of the case, toward the rear, and the screen latches are on the sides, toward the front.

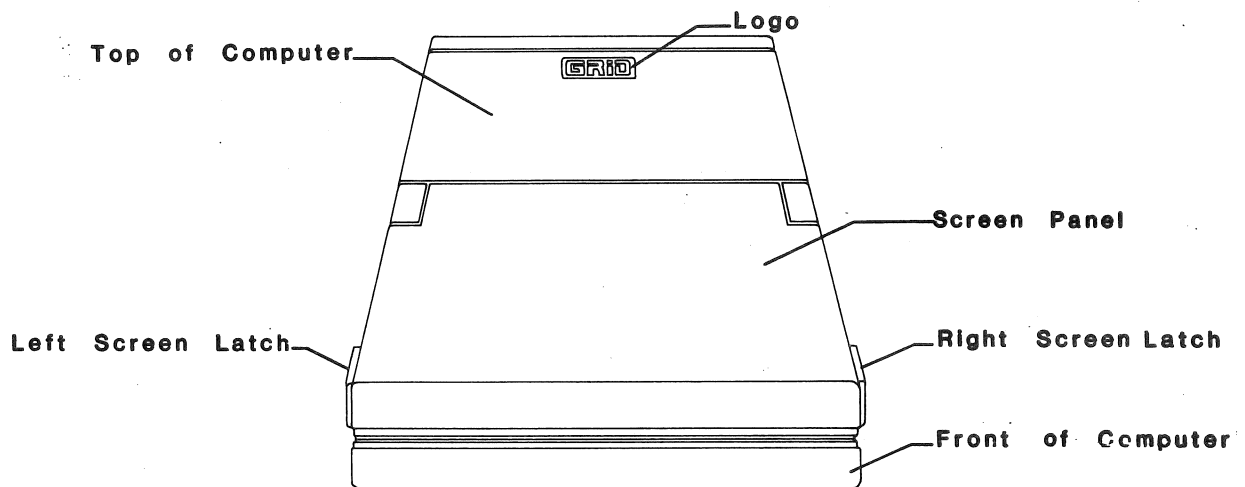


Figure 1-2. Top View of the GRiD Compass

THE REAR VIEW

The rear view of the GRiD Compass is shown in Figure 1-3. You will use many of the items shown here when setting up your computer.

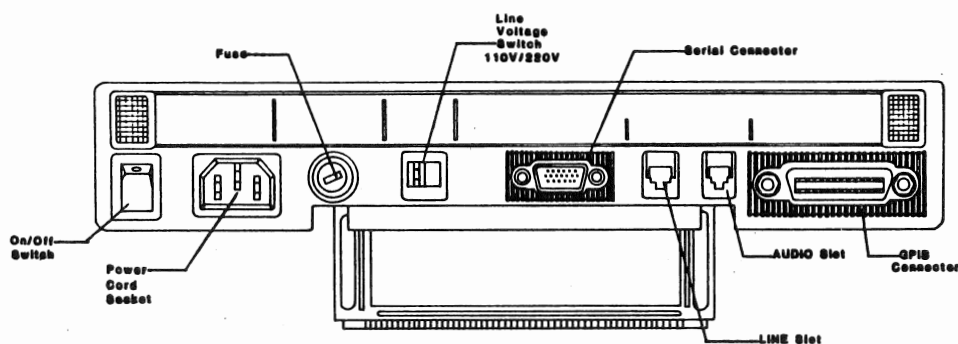


Figure 1-3. Rear View of the GRiD Compass

On/Off Switch

The on/off switch, on the far left, turns the computer on and off, and loads some start-up programs into main memory (RAM). When the computer is turned off, a red circle is visible on the top of the switch. To turn on the computer, press the top of the switch. To turn it off, press the bottom of the switch. The switch also functions as a reset switch should you need to reload memory. When you use it as a reset switch, always wait at least five seconds before turning on the computer again. This ensures the software is loaded properly.

WARNING: Never turn off the computer when the flags on the lower right corner of the screen are flickering. These flags indicate that the computer is reading or writing data; turning off the computer at this time can destroy data.

Power Cord Socket

The power cord socket receives the power cord.

Line Voltage Switch

The line voltage switch lets you switch between 110 volts and 220 volts. See Figure 1-4 below.

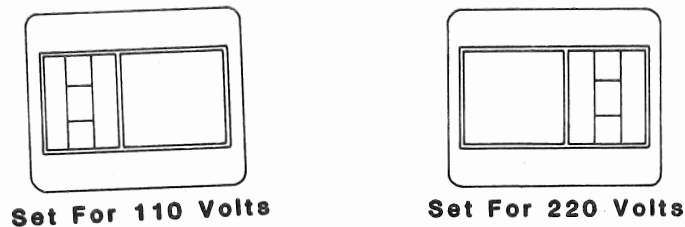


Figure 1-4. Computer Line Voltage Settings

WARNING: Always make sure this switch is set properly before plugging the power cord into an electrical outlet. Supplying power through an incorrect voltage setting can damage your computer.

Fuse

The fuse protects your system from potentially harmful electrical input. The fuse that comes with your computer is a one-ampere, slow-blow fuse for the 110-line-voltage setting. This fuse must have the dimensions 1/4" x 1-1/4" (6.35mm x 31.8mm). The Littelfuse type is 3AG; the Fusetron type is MDL.

If you switch to the 220-volt setting, be sure to exchange the one-ampere fuse for a 500-milliamperere, slow-blow fuse. This fuse must have the dimensions 5mm x 20mm (1/5" x 4/5"). The Schurter type is FST034.3114. To hold the 500-milliamperere fuse, you will also need a fuse carrier. Both the fuse and fuse carrier are available from GRiD. To replace the fuse, turn the fuse cover counterclockwise and remove the fuse.

WARNING: To protect the system against risk of fire, replace the fuse only with one of the correct rating and type.

Serial Connector

The serial connector is used to connect the GRiD Compass to an external modem, certain printers, and other devices. This connector is an RS-232C and RS-422 compatible connector. Note the trapezoidal or "D" shape; it makes an improper connection impossible. Chapter 3 gives instructions for connecting peripherals to the serial connector.

Telephone Connectors

The GRiD Compass has two telephone connectors. The cord that normally plugs into the back of your phone plugs into the slot marked LINE. The handset cord plugs into the AUDIO slot.

GPiB Connector

The GPiB connector is used to connect the GRiD Compass to most GRiD peripherals. This connector is an IEEE-488 connector. Its trapezoidal shape (like that of the serial connector) ensures a proper connection. Chapter 3 gives instructions for connecting peripherals to the GPiB connector.

CHAPTER 2: SETTING UP THE GRiD COMPASS

This chapter describes how to prepare your GRiD Compass for use. It covers setting up the computer, using the keyboard, and closing up the computer for travel.


STARTING UP YOUR GRiD COMPASS

Begin by clearing a sturdy, flat work surface.

▶ TO SET UP AND START UP THE GRiD COMPASS


1. Pull down the computer's leg.

The leg is on the bottom of the GRiD Compass. This position provides a good angle for viewing and allows ventilation. Pull down the leg until it clicks into place. Always extend the leg before turning on the computer.

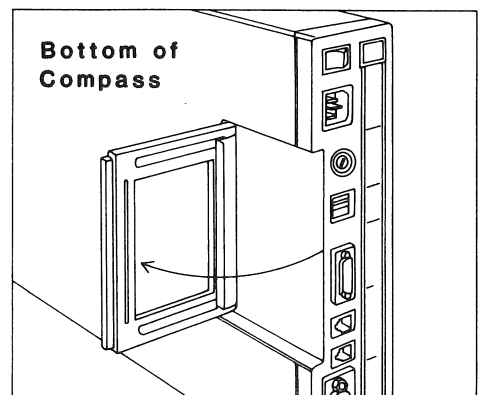


2. Place the unit on a work surface that allows you to get at the rear panel easily.

Don't set the GRiD Compass on a pillow or other soft surface that prevents air circulation on the bottom. Since it has no fan, the GRiD Compass radiates heat through its metal frame, including the bottom. It needs free air circulation to keep cool on its underside.

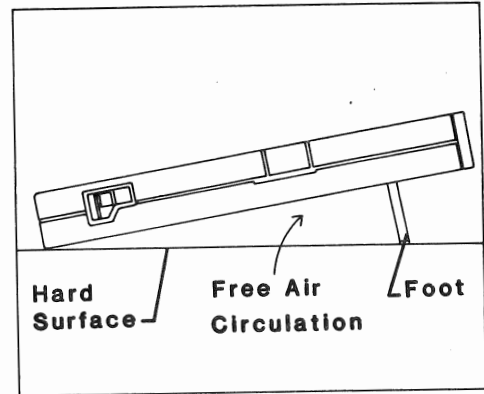


3. Set the voltage line switch at 110 volts (for the U.S.A.).

Outside of the U.S.A., find out what the correct voltage is. If necessary, flip the voltage line switch to 220 volts and change to a 500-milliampere, slow-blow fuse. See Figure 1-4.

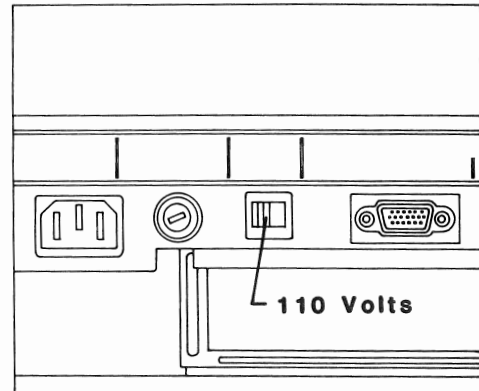

4. Plug in the power cord.


Plug one end of your power cord into the power cord socket at the back of the computer, and the other end into a wall outlet that accepts a three-prong plug. If an adapter is used, make sure it is properly grounded.

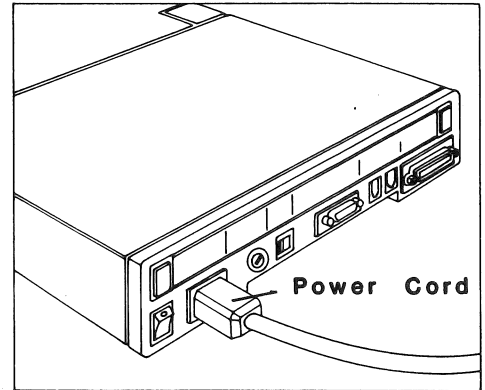

5. Lift up the screen.


The screen is locked to the frame by one latch on each side. Pull these latches toward you and lift the screen.

CAUTION: The screen must be treated with care. Never use abrasive substances on the screen. For complete information on cleaning the screen, see the section *Cleaning Your GRiD Compass* in Chapter 6.

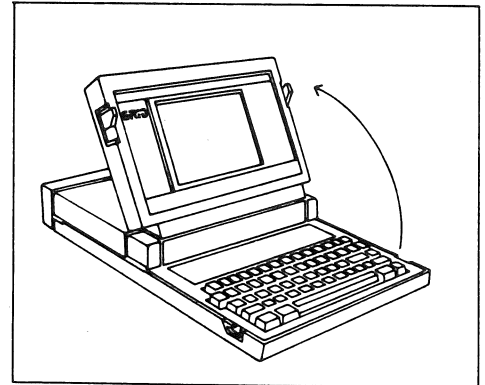

6. Turn on the power switch.

The power switch is on the back of the GRiD Compass, to the left of the power cord socket. Press the top of this switch to turn on the computer.

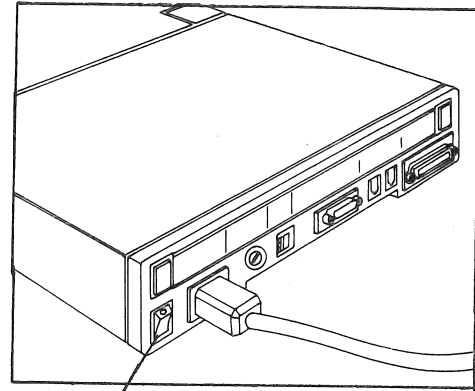

On/Off Switch

Wait for the software to load. When you turn on the power, the computer loads software from the Bubble Memory (permanent storage) into main memory (RAM). This takes about one minute.

When the loading is finished, the initial operating-system screen is displayed.

NOTE: If you want to connect any other devices to your computer, such as a printer or hard disk, see Chapter 3, "Connecting Peripherals to Your GRiD Compass."

THE KEYBOARD

Figure 2-1 shows the keyboard. There are three different types of keys.

- o Alphabetic and numeric keys
- o Function keys -- for issuing commands
- o Arrow keys -- for positioning the cursor

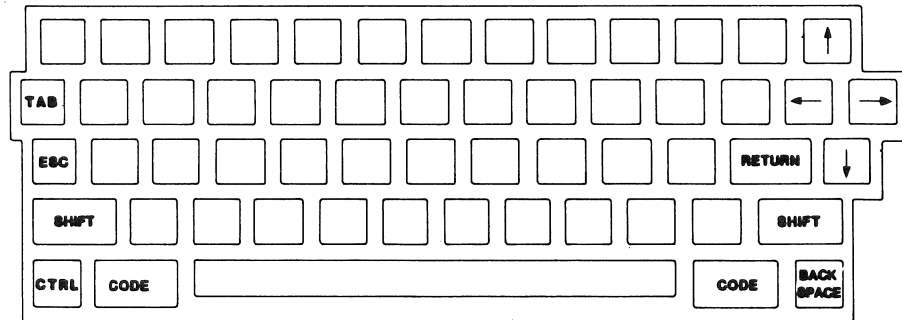


Figure 2-1. GRiD Compass Keyboard

If you are using GRiD/OS (GRiD Operating System), you will learn how to use the keyboard in Getting Started with the GRiD Compass.

MS-DOS (Microsoft™ -- Disk Operating System) users should consult the Compass Computer MS-DOS User's Guide to learn how the keys function on the GRiD Compass.

CLOSING UP YOUR GRiD COMPASS

To prepare your GRiD Compass for travel, reverse the setup process.

▶ HOW TO CLOSE UP THE GRiD COMPASS

1. Turn off the power.
2. Close the screen panel.

Press it down gently until you hear it click shut.

3. Disconnect all cords.
4. Retract the computer leg.

Pick up and turn the computer so that you can get a good grip on its leg. Pull the leg away from the bottom of the computer until it clicks, then fold it back. When it reaches its closed position, you will hear another click.

Don't forget your power cord and whatever peripherals, cables, and accessories you want to take with you.

CHAPTER 3: CONNECTING PERIPHERALS TO YOUR GRiD COMPASS

This chapter describes how to connect the following peripherals to your GRiD Compass:

- o 2101 Disk System
- o 2102 Portable Diskette Drive
- o Epson MX-80, MX-82, FX-80, and MX-100 printers
- o Diablo 620 and 630 printers
- o Hewlett-Packard 7225A and 7225B, 7470A, 9872C and 9872T plotters

For more detailed information on how to use these peripherals, consult the manual that comes with each one.

CHOOSING THE GPIB OR SERIAL CONNECTOR

When connecting your peripheral to the GRiD Compass, you must use either the GPIB connector or the serial connector, located on the rear panel (see Figure 1-3).

The GPIB connector is for peripherals that require an IEEE-488 connector. The Disk System, Epson printers, and Hewlett-Packard plotters should be connected to the GPIB connector (see Figure 3-1).

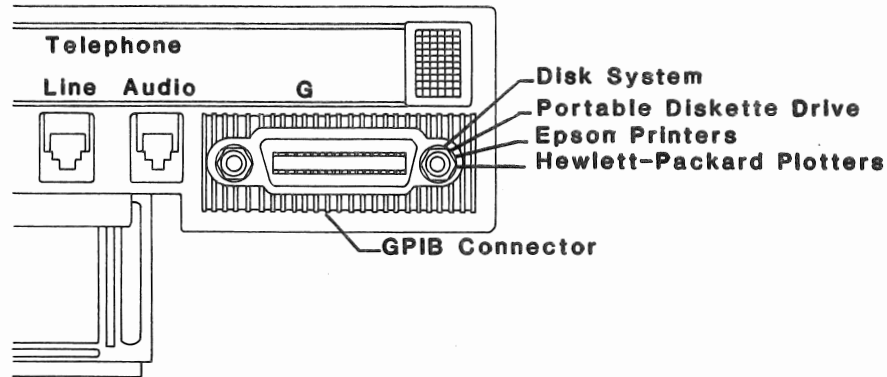


Figure 3-1. Peripherals Connected to GPIB Connector

The serial connector is for peripherals that require an RS-232C or RS-422 connector. The Diablo printers and any external modem should be connected to the serial connector (see Figure 3-2).

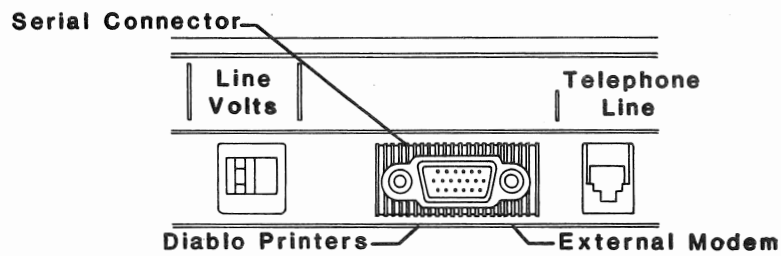


Figure 3-2. Peripherals Connected to Serial Connector

NOTE: When connecting a peripheral not listed above, always consult its manual to see what type of connector you should use.

CONNECTING PERIPHERALS TO THE GPIB CONNECTOR

Use a GPIB cable to hook your peripheral to the GPIB connector.

To connect your peripheral, attach the end of the GPIB cable that has the GRiD logo to the GPIB connector on the back of the GRiD Compass. Attach the cable's other end to the GPIB connector on the back of the peripheral. Because of its trapezoidal shape, the cable will plug into the connector in only one way. If it doesn't fit in

easily the first time, turn the end of the cable upside down. Use your fingers to tighten the screws. Never use a screwdriver; you may damage the connector.

Figure 3-3 shows a GPIB cable connecting the 2101 Disk System to the GRiD Compass.

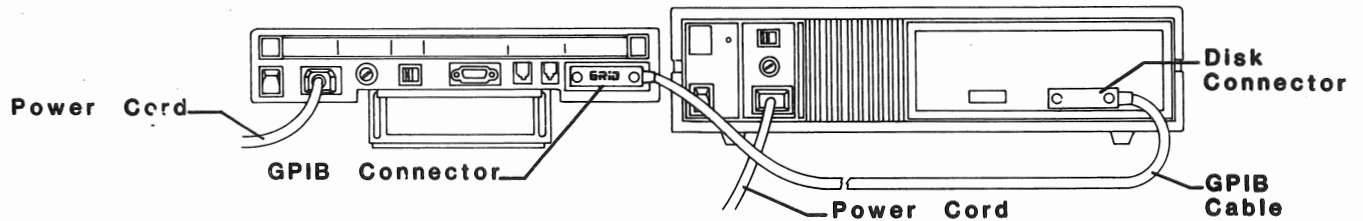


Figure 3-3. GPIB Cable Connecting GRiD Compass to 2101 Disk System

"Daisy Chain"

To connect additional peripherals to the GRiD Compass, attach only one GPIB cable to the computer and not more than two cables to any peripheral. Figure 3-4 shows three peripherals connected to the GRiD Compass.

Nicht unbedingt notwendig.

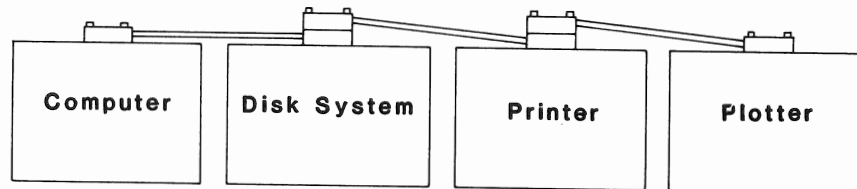


Figure 3-4. Three Peripherals Connected to GRiD Compass

The order in which you connect peripherals is not important as long as they are all linked together. In Figure 3-4, the Disk System and printer have two GPIB cables connected to them. Figure 3-5 shows two GPIB cables connected together. Simply fit one connector on top of the other and tighten the screws with your fingers.

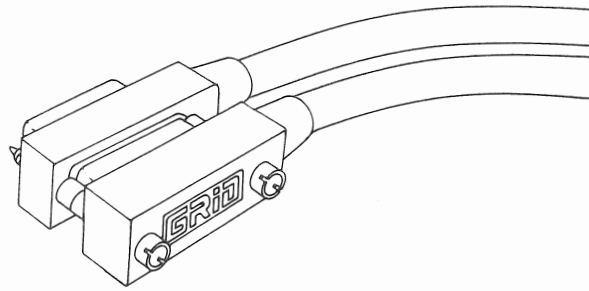


Figure 3-5. Two Connected GPIB Cables

CONNECTING PERIPHERALS TO THE SERIAL CONNECTOR

Use a serial cable to connect your peripheral to the serial connector.

To connect your peripheral, screw the cable's smaller end into the serial connector on the back of the GRiD Compass. Connect the cable's larger end to the RS-232C or RS-422 connector on the back of the peripheral. Check the larger end of your cable to see whether it screws, snaps, or slides into the connector.

Figure 3-6 shows a serial cable connecting the Diablo 620 to the GRiD Compass.

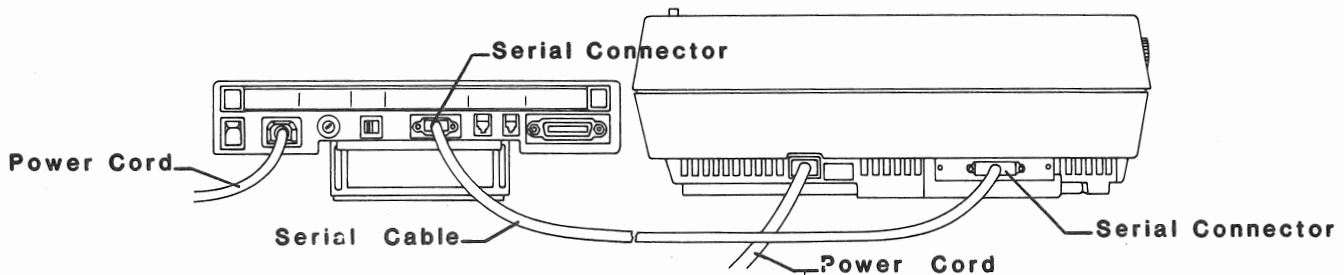


Figure 3-6. Serial Cable Connecting GRiD Compass to Diablo 620 Printer

NOTE: Only one peripheral at a time may be connected to the GRiD Compass through the serial connector. Unlike the GPIB connector,

the serial connector cannot accommodate peripherals in a chain.

CONNECTING THE 2101 DISK SYSTEM

Figure 3-7 shows the front and rear views of the 2101 Disk System.

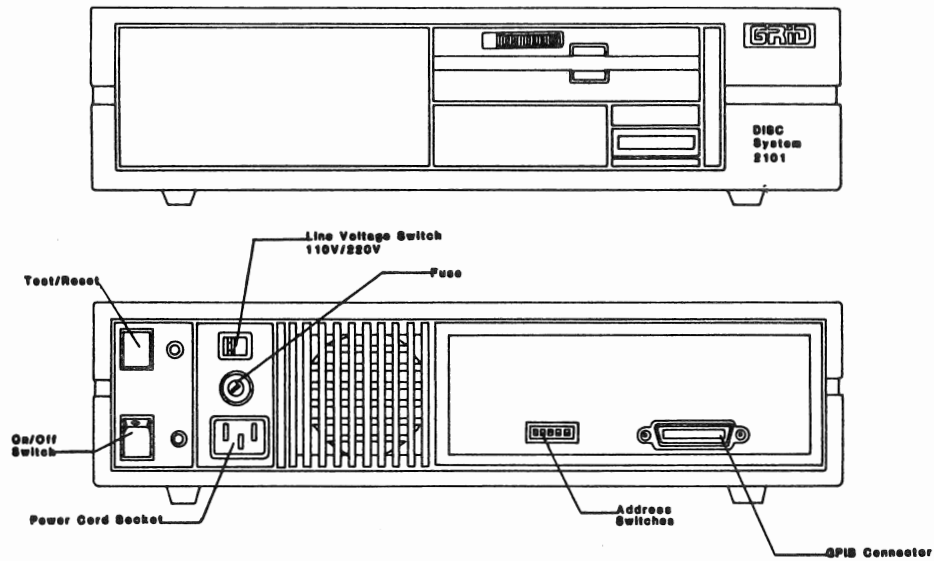


Figure 3-7. Front and Rear Views of the 2101 Disk System

The address switches must be set as shown in Figure 3-8. For the Disk System to function properly, Switch 3 is on and the other switches (1, 2, 4, and 5) are off. These switches set an address that allows the computer to exchange data with the peripheral.

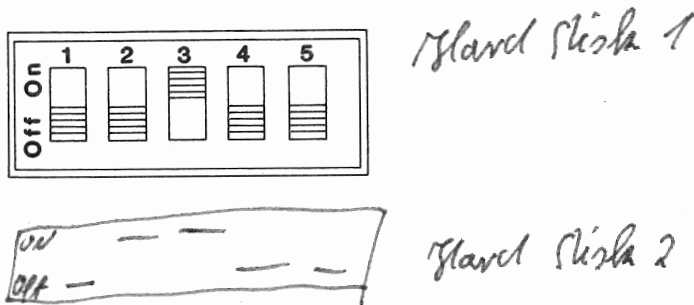


Figure 3-8. Switch Settings for 2101 Disk System

You should also make sure the line voltage switch on the Disk System is set properly. After these switches are set, you are ready to connect the Disk System to the GRiD Compass.

▶ TO CONNECT THE 2101 DISK SYSTEM TO THE GRiD COMPASS

1. Turn off the computer, the Disk System, and any other peripherals.
2. Attach one end of the GPIB cable to the connector on the back of the Disk System.
3. Attach the other end of the GPIB cable to the GPIB connector on the back of the computer. Only one GPIB cable should be attached to the computer. If a device is already connected to the computer, connect the GPIB cable to another device's GPIB connector. The order in which you connect peripherals is not important as long as they are all linked together.
4. Make sure all power cords are plugged in.
5. Turn on the Disk System (and any other peripherals) and then turn on the computer.

CONNECTING THE 2102 PORTABLE DISKETTE DRIVE

Figure 3-9 shows the front and rear views of the 2102 Portable Diskette Drive.


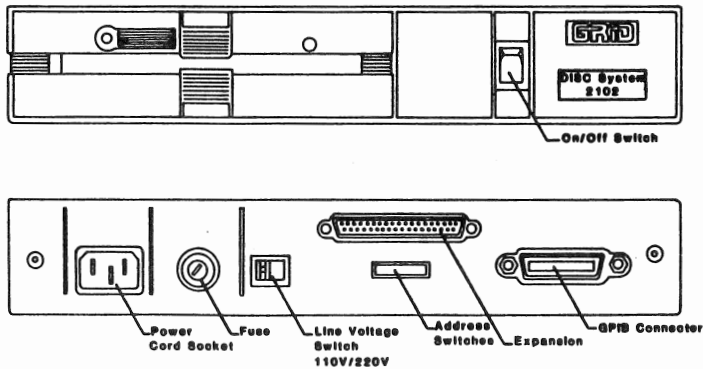


Figure 3-9. Front and Rear Views of the 2102 Portable Diskette Drive

The address switches must be set as shown in Figure 3-10. For the Portable Diskette Drive to function properly, Switches 2 and 3 are on and the other switches (1, 4, and 5) are off. These switches set an address that allows the computer to exchange data with the Portable Diskette Drive.



Portable Floppy 1

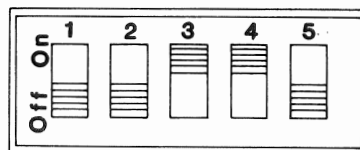

Portable Floppy 2

Figure 3-10. Switch Settings for Portable Diskette Drive

You should also make sure the line voltage switch on the Portable Diskette Drive is set properly. After these switches are set, you are ready to connect the Portable Diskette Drive to the GRiD Compass.

▶ TO CONNECT THE 2102 PORTABLE DISKETTE DRIVE TO THE GRiD COMPASS

1. Turn off the computer, Portable Diskette Drive, and any

other peripherals.

2. Attach one end of the GPIB cable to the connector on the back of the Portable Diskette Drive.
3. Attach the other end of the GPIB cable to the GPIB connector on the back of the computer. Only one GPIB cable should be attached to the computer. If a device is already connected to the computer, connect the GPIB cable to another device's GPIB connector. The order in which you connect peripherals is not important as long as they are all linked together.
4. Make sure all power cords are plugged in.
5. Turn on the Portable Diskette Drive (and any other peripherals) and then turn on the computer.

CONNECTING THE EPSON PRINTERS

Figure 3-11 shows the front and rear views of the Epson MX-82 printer.

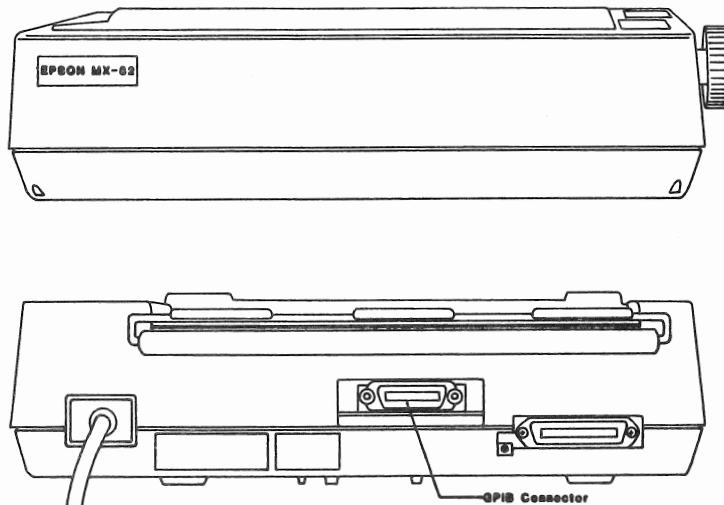


Figure 3-11. Front and Rear Views of the Epson MX-82 Printer

If you obtained your Epson printer from GRiD Systems, it is already equipped to work with the GPIB cable. If you obtained your printer

elsewhere, you must also obtain Epson's IEEE-488 Interface Board and install it in the printer. This board is not available from GRiD; it can be purchased from the store where you bought your printer. The Epson manual that comes with the board gives installation instructions. You must make sure the address switches on the interface board are set as shown in Figure 3-12. The settings for Switch 1 are shown to the left; the settings for Switch 2 are shown to the right.

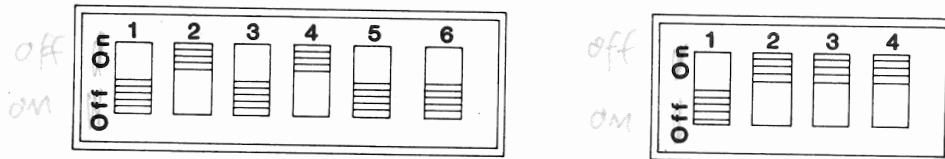


Figure 3-12. Switch Settings for Epson Printers

After these switches are set, you are ready to connect the printer to the GRiD Compass.

▶ TO CONNECT EPSON PRINTERS TO THE GRiD COMPASS

1. Turn off the computer, the printer, and any other peripherals.
2. Attach one end of the GPIB cable to the connector on the back of the printer.
3. Attach the other end of the GPIB cable to the GPIB connector on the back of the computer. Only one GPIB cable should be attached to the computer. If a device is already connected to the computer, connect the GPIB cable to another device's GPIB connector. The order in which you connect peripherals is not important as long as they are all linked together.
4. Check your Epson manual for instructions on loading the ribbon and paper into the printer.
5. Position your paper so that the print head is at the top of a new page (the perforated edge).

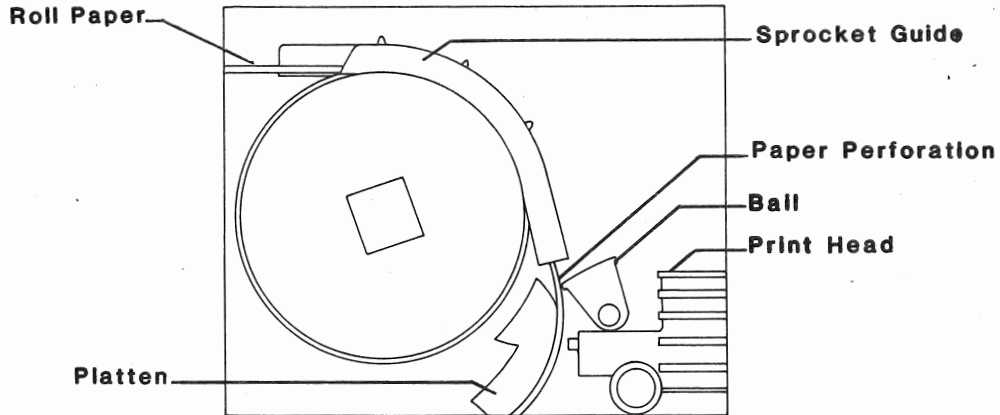


Figure 3-13. Paper Aligned in Epson Printer

6. Make sure all power cords are plugged in.
7. Turn on the printer (and any other peripherals) and then turn on the computer.

To print a document, you must make sure that the printer's ON LINE light is lit.

CONNECTING THE DIABLO PRINTERS

Figure 3-14 shows the front and rear views of the Diablo 620 printer.

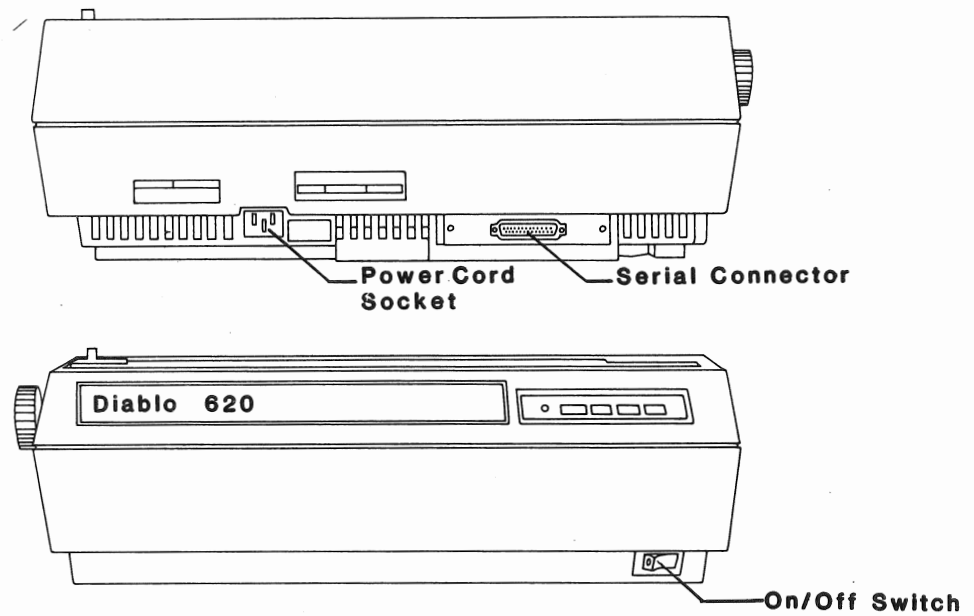


Figure 3-14. Front and Rear Views of the Diablo 620 Printer

The address switches must be set as shown in Figure 3-15. These switches set an address that allows the computer to exchange data with the Diablo printer.

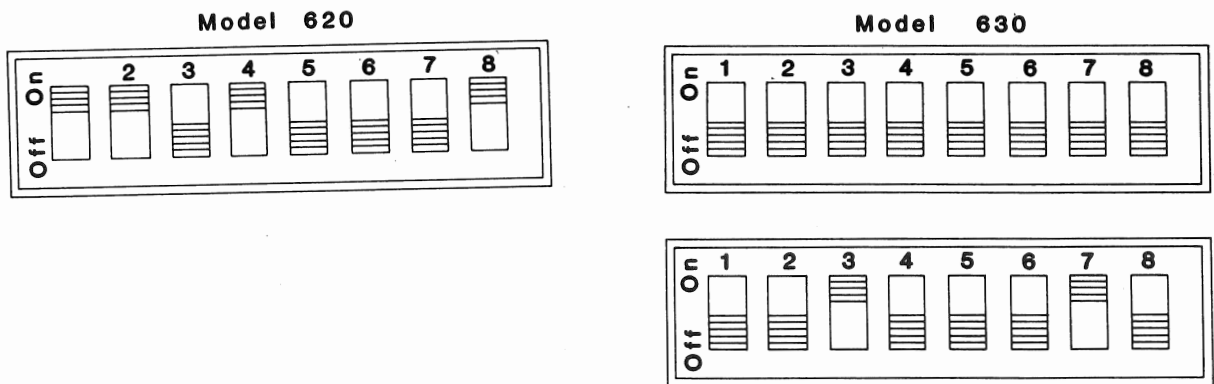


Figure 3-15. Switch Settings for Diablo Printer

After these switches are set, you are ready to connect the Diablo printer to the GRiD Compass.

▶ TO CONNECT THE DIABLO PRINTERS TO THE GRiD COMPASS

1. Turn off the computer, the printer, and any other peripherals.
2. Attach one end of the serial cable to the connector on the back of the printer.
3. Screw the other end of the cable into the back of the computer.
4. Check your Diablo manual for instructions on loading the ribbon and paper into the printer.
5. Position your paper so that it is under the print bail (the bar that holds the paper against the platen of the printer).

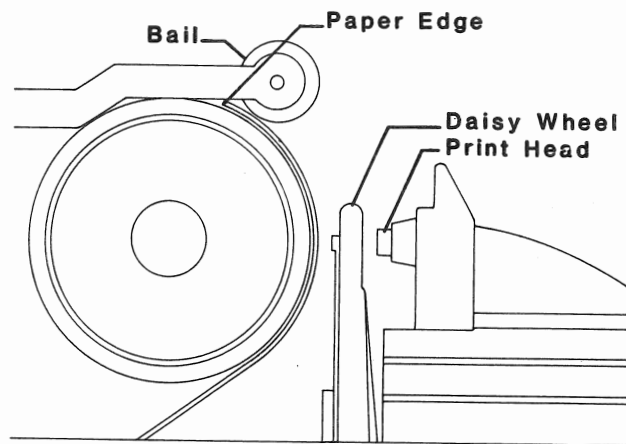


Figure 3-16. Paper Aligned in Diablo Printer

6. Make sure all power cords are plugged in.
7. Turn on the printer (and any other peripherals) and then turn on the computer.

CONNECTING THE HEWLETT-PACKARD PLOTTERS

You can connect your GRiD Compass to the following Hewlett-Packard plotters:

- o Models 7225A and 7225B (single-pen)
- o Model 7470A (two-pen)
- o Models 9872C and 9872T (eight-pen)

Figure 3-17 shows the front and rear views of the Hewlett-Packard 7470A plotter.

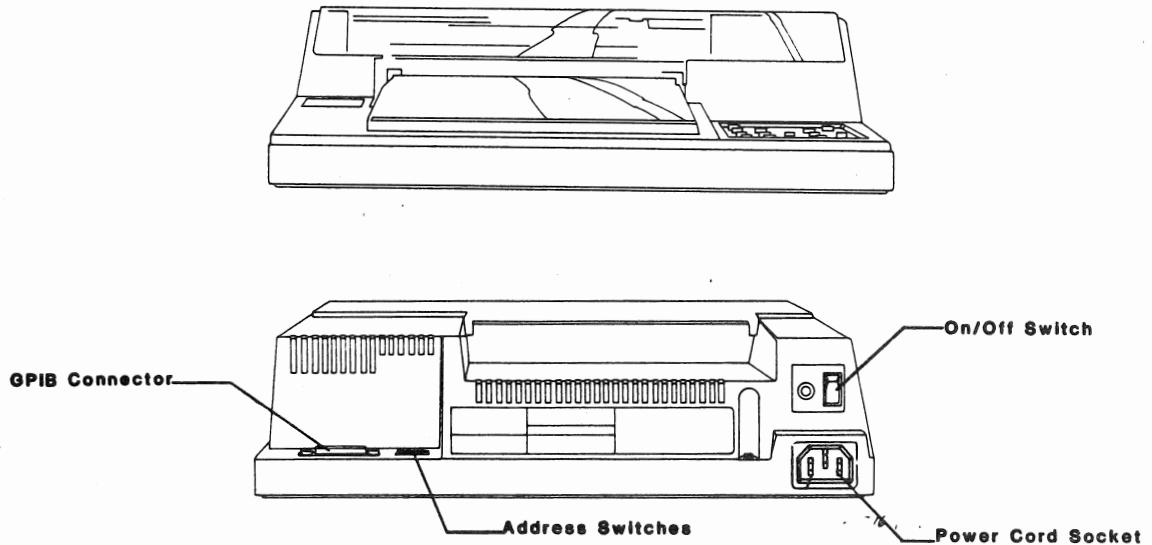


Figure 3-17. Front and Rear Views of the Hewlett-Packard 7470A Plotter

The address switches must be set as shown in Figure 3-18 for the plotters to function properly.

NOTE: The order of the switches may be reversed from one plotter to another. Switch 1 appears on the left for Model 9872C, on the right for Model 7225A. However, the setting for each switch is always the same.

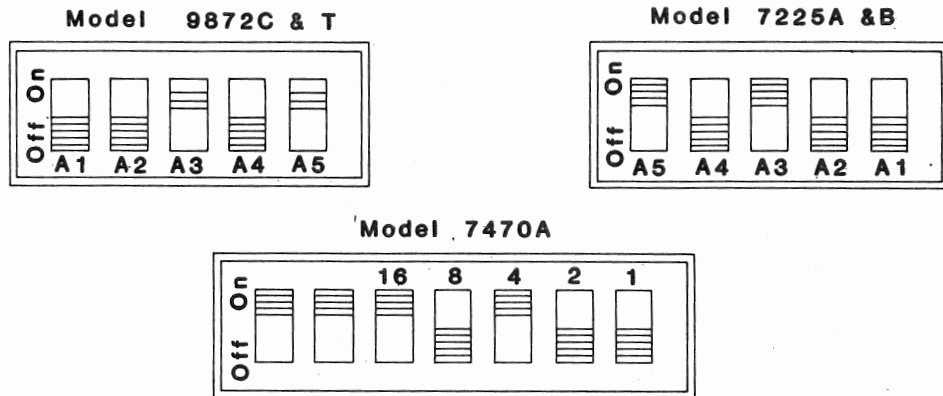


Figure 3-18. Switch Settings for Hewlett-Packard Plotters

▶ TO CONNECT THE HEWLETT-PACKARD PLOTTERS TO THE GRiD COMPASS

1. Turn off the computer, the plotter, and any other peripherals.
2. Attach one end of the GPIB cable to the connector on the back of the plotter.
3. Attach the other end of the GPIB cable to the GPIB connector on the back of the computer. Only one GPIB cable should be attached to the computer. If a device is already connected to the computer, connect the GPIB cable to another device's GPIB connector. The order in which you connect peripherals is not important as long as they are all linked together.
4. Check your Hewlett-Packard manual for instructions on how to set up the plotter.
6. Make sure all power cords are plugged in.
7. Turn on the plotter (and any other peripherals) and then turn on the computer.

CHAPTER 4: USING THE MODEM AND TELEPHONE HANDSET

This chapter describes how to use the GRiD Compass modem and telephone handset.

WHAT IS A MODEM?

The GRiD Compass uses a built-in modem, a device used to transmit and receive data or voice through the telephone system. The modem operates through any standard telephone system at either 300 or 1200 bits per second.

With the appropriate software, you can communicate with the following computers inside and outside the GRiD family of products (Figure 4-1).

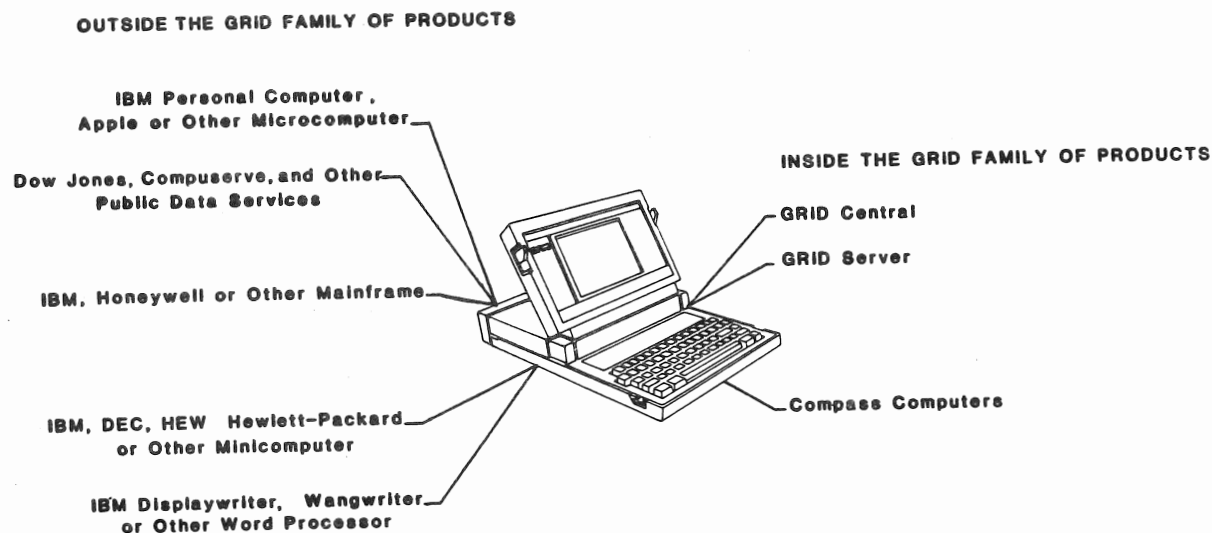


Figure 4-1. Communication Inside and Outside the GRiD Family of Products

NOTIFYING THE TELEPHONE COMPANY

The Federal Communications Commission (FCC) requires that you contact your local telephone company before using telephone lines to transmit data. The telephone company will want the following information for any telephone number from which you operate the computer.

- o Manufacturer -- GRiD Systems Corporation
- o Equipment model number -- 1101
- o FCC registration number -- AJ496M 70322-DM-E

This number is printed on a sticker inside the storage well that holds the leg.

- o Ringer equivalence -- 0.9B

CONNECTING THE TELEPHONE LINE

The GRiD Compass has two telephone connectors. Your phone cord plugs into the slot marked LINE. The handset plugs into the AUDIO slot.

Each connector is a different size. If the plug doesn't fit in easily, you are probably trying to fit it in the wrong slot.

Most offices and residences now use the standard plug-in jack connector (RJ11C). If you have the older, four-prong phone connector, you will need an adapter to plug into the LINE slot.

To connect your GRiD Compass to the telephone system, unplug the cord from the back of your telephone and plug it into the LINE slot on the back of the computer (see Figure 4-2).

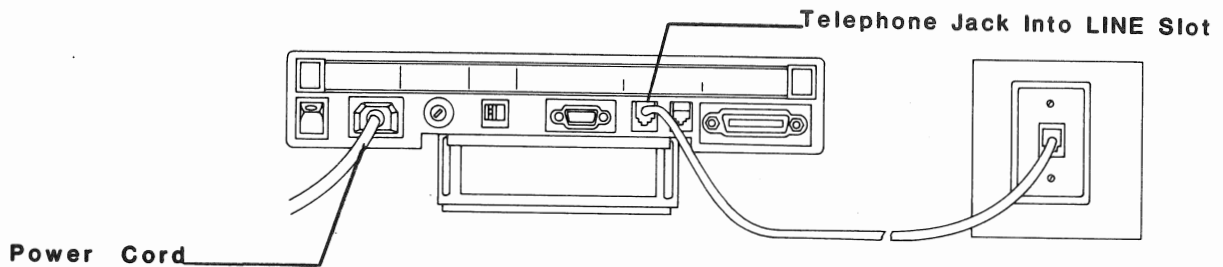


Figure 4-2. GRiD Compass Connected to Phone Jack

To use your telephone while your computer is connected, you will need a T-connector (available from GRiD) and another telephone cord. Unplug the telephone cord from the back of your phone and plug the T-connector into its place. Now plug both the original telephone cord and the extra telephone cord into the T-connector. Plug the other end of both cords into the GRiD Compass. See Figure 4-3.

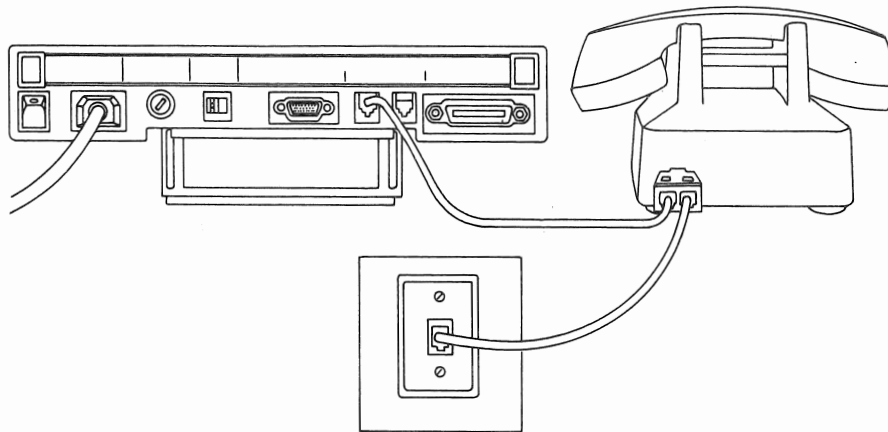


Figure 4-3. Phone and Modem Connected to Telephone System

You can now use your telephone line either to speak on the phone or to transmit and receive data from another computer.

NOTE: If your modem is not working properly, see the Appendix "Testing the Modem" to determine if it is your modem or telephone line that is causing the problem.

ADJUSTING THE SPEAKER VOLUME

When using the modem to access another computer, the GRiD Compass has an automatic dialing feature. After you fill in the appropriate form, the GRiD Compass will dial the number automatically. You may want to adjust the volume of the sounds made during dialing. You can set the volume to "Off," "Low," "Medium," or "High." For complete details on adjusting the speaker volume, see in the GRiD Management Tools Reference the Access -- CODE-A section of the "GRiDTerm" chapter or see the Sign-on -- CODE-? section of the "GRiDManager" chapter.

THE TELEPHONE HANDSET

A telephone handset can also be connected to your GRiD Compass so that you can make and receive telephone calls. An optional accessory, the handset is available at your local GRiD office. Regular telephone handsets won't operate properly with your GRiD

Compass.

Plug your handset into the AUDIO slot on the back of the GRiD Compass (see Figure 4-4).

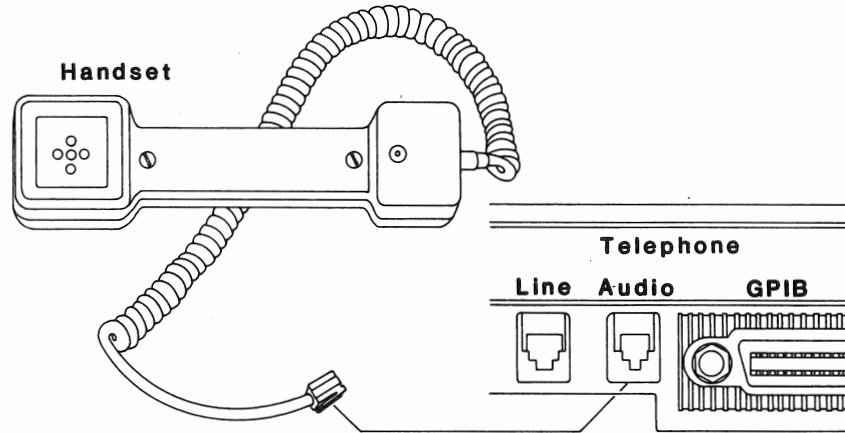


Figure 4-4. Telephone Handset Connected to GRiD Compass

A cradle is provided with your handset. You can rest your handset on the cradle whenever you are not using it. The cradle hooks onto either side of the GRiD Compass (see Figure 4-5).

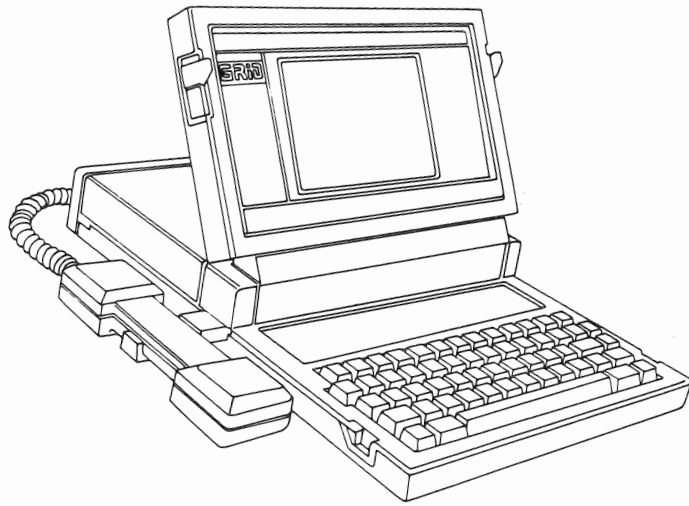


Figure 4-5. Handset Resting on Cradle

CHAPTER 5: TROUBLESHOOTING

This chapter describes problems that might arise as you use your GRiD Compass and provides tips on how to resolve them.

IDENTIFYING THE PROBLEM

There are generally two types of problems: problems with computer hardware or software, and problems due to user errors.

User Errors in Setting Up the GRiD Compass

Table 5-1 lists common problems you might encounter when setting up your computer system. To use the table, look for your problem under the heading Symptoms, identify the cause, and follow the suggested remedy.

Table 5-1. Troubleshooting Chart

Symptom	Cause	Remedy
No response when GRiD Compass is turned on	Not plugged in	Check that the power cord is firmly connected to GRiD Compass rear panel and to wall outlet.
	Bad fuse	Replace with correct fuse. In U.S.A. -- one-ampere fuse. (See Chapter 1.)
	Line Voltage setting incorrect	Set to correct line voltage. In U.S.A. -- 110 volts.
No response when peripheral is turned on	Not plugged in	Plug in power cord.
	Hardware not functioning	Run a self-test. (See manual that comes with each peripheral.)
	Cables not hooked up correctly	Connect cables securely and properly. (See Chapter 3.)
GRiD Compass slow to respond	With GRiD/OS, system takes about 40 seconds to load memory	Be patient.
	With MS-DOS, system takes from 3 to 45 seconds to load memory	Be patient.
Incorrect date or time on screen	Time-of-day clock set incorrectly	Set correctly. (For GRiD/OS users, see <u>Getting Started with the GRiD Compass</u> . For MS-DOS users, see <u>Compass Computer MS-DOS User's Guide</u> .)

If, after consulting the troubleshooting chart, you've determined the problem is not due to a user error, try to determine whether it is a software or hardware problem.

Software or Hardware Problems

CAUTION: Your GRiD Compass must have the correct software to work properly when you first turn it on.

If you are using GRiD/OS, you always need the following files in your Programs subject, regardless of the application you use:

- o CCOS
- o Common
- o Executive

For communications with GRiD Central and GRiD Server, you need the following files in your Programs subject:

- o GRiDManager
- o PhoneLink
- o Modem

NOTE: You don't need PhoneLink and Modem when you use GRiDLink to connect with GRiD Server.

If you are using MS-DOS, you need the MS-DOS diskette.

If you have problems with specific software other than CCOS, Common, and Executive, you might try erasing the copy of the old software and replacing it with a different copy of the same version.

If this still doesn't work, and if you have ordered the GRiD Customer Support Service with your GRiD Compass, call the Customer Support Center at (415) 961-4743.

If you decide your problem is not a setting-up or software problem, then it may be a hardware problem. Call the Customer Support Center for help with diagnosing.

DEALING WITH RADIO FREQUENCY INTERFERENCE

If you suspect that your GRiD Compass is interfering with another electronic device (such as a TV or radio), do the following:

With the system turned on, watch and/or listen to the device that seems to be picking up radio frequency interference. Turn off the computer. If interference subsides significantly, you may confidently trace your problems to the computer. If no change occurs, the problem lies elsewhere (possibly in the other electronic device itself).

If the computer seems to be the cause, try these methods for lessening interference. Make sure the computer and the other electronic device are turned on to determine if one or more of these suggestions work.

- o Change the position of the electronic device's antenna. In the case of radios, this may mean moving the radio itself.
- o Move the computer around so it faces a new direction.
- o Move the computer farther away from the other electronic device. If this means unplugging the computer, be sure to turn it off before you unplug it.
- o Plug either the computer or the electronic device into a different outlet. If possible, plug the two instruments into different outlets.

If these solutions still do not produce satisfactory reception, contact your local GRiD office.

CHAPTER 6: MAINTENANCE

This chapter describes how to care for your GRiD Compass. Although the GRiD Compass is basically durable, you should treat it as you would any precision instrument -- with care.

GENERAL WARNINGS

Observe these general warnings.

- o Always unfold the computer's leg. This allows adequate ventilation and puts the keyboard and screen at the proper viewing angle.
- o Operate the computer only when the surrounding temperature is from 50° to 104° F (10° to 40° C).
- o Operate the computer only when the relative humidity level is from 5% to 95% noncondensing.
- o Do not store or set up the computer (or its peripherals) in direct sunlight.
- o Do not subject the computer to unnecessary shock or vibration.
- o Do not operate the computer in a dirty or dusty environment.
- o Do not get the computer wet; electrical equipment should not be operated in a moist environment.

- o Do not operate your computer in any potentially flammable atmosphere.
- o Do not attempt to open the computer case; it contains no user-serviceable parts. Such action voids your warranty and can damage the computer.
- o Arrange any power cords or other cords so they can't be pulled out or tripped over when the computer is in use.
- o Make sure you properly ground any power-plug adapter.
- o To protect the computer against risk of fire, replace the fuse only with one of the same rating and type. In the U.S.A, use a one-ampere, slow-blow fuse for 110-volt operation. Outside the U.S.A., use a 500-milliampere, slow-blow fuse for 220-volt operation.
- o Always turn off the computer before unplugging it.

CLEANING YOUR GRiD COMPASS

Before cleaning your GRiD Compass, turn it off and disconnect the power cord from the outlet.

To clean the case, use a slightly damp, soft cloth and, if necessary, a mild, nonabrasive detergent. Wipe the case clean and then dry it.

To clean the screen, slightly dampen a soft cloth with an ammonia-based glass cleaner and gently wipe the screen. Use the cleaner sparingly so that no fluid runs down the screen and into the frame.

If necessary, dust the rear panel of your GRiD Compass with a dry cloth. To prevent shock hazard, never apply any liquid to the rear panel.

WARNING: Never use any cleaning agent such as dust wax, spray cleaner, or any abrasive substance.

STORING YOUR GRiD COMPASS

Always store your GRiD Compass between the temperatures -40° and 149° F (-40° to 65° C). To keep it free from dust and dirt, store it in the carrying case that comes with each GRiD Compass.

TRAVELING WITH YOUR GRiD COMPASS

When traveling with your GRiD Compass, carry it with you instead of checking it as luggage. Many transportation carriers cannot cover the replacement cost of your GRiD Compass should they lose or damage it.

It should be relatively safe to x-ray the GRiD Compass in airport security checks, but you must make the final decision. You can have it hand-checked, if you wish.

When traveling abroad

- o Be sure to bring a 500-milliampere, slow-blow fuse (and its carrier) for the different voltage (220-250 volts).
- o Before turning on your GRiD Compass, make sure you change to the 500-milliampere fuse and set the line voltage switch to 220 volts (see Chapter 1).
- o Make sure you have properly grounded the adapter for nongrounded outlets.

UPDATING THE CLOCK

The time-of-day clock, which displays the time and date on your screen, is not intended to replace your wristwatch. The precision of its time-measuring electronics may vary because of temperature changes. Check the time and date of your clock periodically.

If you are using GRiD/OS, see the section Set Time -- CODE-? in the "GRiDManager" chapter of the GRiD Management Tools Reference.

If you are using MS-DOS, see the chapter "The Settime Command" in the Compass Computer MS-DOS User's Guide.

APPENDIX: TESTING THE MODEM

If your modem is not working properly, do the following test to see whether your modem or your telephone line is causing the problem.

This test is divided into two parts. The second part is repeated once.

You must have the GRiDTerm application to perform the test. You cannot perform this test if you need telephone operator assistance to make a phone call.

▶ TO TEST YOUR MODEM: PART 1

1. Plug the telephone line (from the wall jack) into the LINE slot on the back of the computer.
2. Select GRiDTerm from the list of program titles. The Access form appears on the screen.
3. Fill in the Phone Number item with the number for the local time service, local weather service, or some other recorded-voice phone number.
4. Leave the Remote System Name item blank.
5. Set the Baud Rate item to 1200.
6. Set the Modem Type item to Internal.
7. Make sure the Dial Type item is set correctly. The choices are Pulse (rotary dial) and Touch-Tone™.
8. Set the Voice Before Data item to No.
9. Set the Wait For Answer item to 20.
10. Make sure the Speaker Volume item is set to Medium or High.

If the modem does not pause for dial tone at carets (^) or doesn't respond even with dial tone at a caret, you have a bad modem. You don't need to go any further with your testing. Contact your local GRiD sales representative to get your modem repaired.

If you hear the recorded message from the recorded-voice phone number, your modem is working properly. Continue the test.

▶ TO TEST YOUR MODEM: PART 2

1. With the Access form displayed on the screen, enter the phone number (415) 965-3229 to connect to a loopback modem at the Customer Support Center. This modem is used for testing; any data you send to it is automatically transmitted back to you.
2. Change the Baud Rate item to 300.

After confirming the Access form, you should connect to the modem at the Customer Support Center within ten seconds. If you don't connect, disconnect and call again. You may have a bad phone line. If you still can't connect to the modem after trying about five more times, your modem is probably bad. To confirm whether your phone line is bad, try the test using a different phone line.

If you do connect to the modem at the Customer Support Center, you will see a blank screen with the following message at the bottom:

Data mode established

To make sure your modem is working properly, follow the next step.

3. Type a few characters on the keyboard. If you get an error message, or you see characters other than those you typed, or a different number of characters on the screen than you typed, disconnect and try again. You may have a bad phone line. If you still can't connect to the modem after trying about five more times, your modem is probably bad. Again, to be absolutely sure, you should try the test with a different phone line.

If you haven't had any problems so far, repeat Part 2 to see how your modem functions at 1200 baud rate. This time, set the Baud Rate item on the Access form to 1200 (step 2).

If all of the above steps check out OK, you can be fairly sure your modem functions properly. If you have any trouble with the test, phone the Customer

Support Center at (415) 961-4743.

INDEX

- 2101 Disk System
 - Address switches, 18
 - Connecting, 18
- 2102 Portable Diskette Drive
 - Address switches, 19
 - Connecting, 19

- Alphabetic keys, 10, 11
- Arrow keys, 10, 11
- Audio Slot, 3, 31

- Bad fuse, 4
- Bubble memory, 10

- CCOS, 35
- Clock, 34, 39
- Cleaning
 - Screen, 38
 - Compass, 38
- Closing up GRiD Compass, 11
- Common, 35
- Contents of box, 1
- Cradle, for handset, 32
- Customer Support Center, 35, A-2, A-3

- Diablo printer
 - Address switches, 23
 - Connecting, 24

- Epson printer
 - Address switches, 21
 - Connecting, 21
- Executive, 35

- FCC registration number, 28
- Function keys, 10, 11
- Fuse, 38

- General warnings, 37
- GPiB connector
 - Connecting the GPiB cable, 14
 - Location, 3, 5
- GRiD Compass
 - Cleaning, 38
 - Rear view, 3
- Setting up, 7-10
 - Storing, 38

- Top view, 2
- Traveling, 39
- Updating the clock, 39
- GRiD family of products, 27-28
- GRiD/OS, 35
- GRiDManager, 35
- GRiD Central, 35
- GRiD Server, 35

- Handset, 30-32
- Hard Disk.
 - See 2101 Disk System.
- Hewlett-Packard plotters
 - Address switches, 26
 - Connecting, 26

- IEEE-488 board.
 - See Epson printer, connecting
- IEEE-488 connector.
 - See GPIB connector
- Incorrect line voltage, 34

- Keyboard
 - Figure of, 11
 - Using the keyboard, 10-11

- Leg
 - Extending, 7
 - Retracting, 11
- Line voltage switch, 3-4

- Maintenance, 37
- Main memory (RAM), 10
- Modem
 - Connecting to, 29-30
 - Testing, A-1 - A-3
- MS-DOS, 11, 35

- On/Off switch, 3
- Operating the GRiD Compass
 - Relative humidity, 37
 - Temperature, 37

- Peripherals
 - 2101 Disk System, 17
 - 2102 Portable Diskette Drive, 19
 - Diablo printers, 23
 - Epson printers, 20
 - Hewlett-Packard plotters, 25
- Permanent storage (Bubble Memory), 10
- PhoneLink, 35
- Power cord socket, 3

Printer

- Diablo, 23-24
- Epson, 20-21

Radio frequency interference (RFI), 35

RAM, 10

Rear view

- On/off switch, 3
 - Power cord socket, 3
 - Line voltage switch, 3
 - Fuse, 3
 - Serial connector, 3
 - Telephone connectors, 3
 - GPIO connector, 3
- Ringer equivalence, 28
- RJ-11C jack, 29
- RS-232C connector.
See serial connector.

Serial connector

- Connecting Serial cable, 16
 - Location of, 3
- Screen, 9
- Speaker volume, adjusting, 30
- Starting up GRiD Compass, 7
- Storing the GRiD Compass, 38

T-connector, 29-30

- Telephone company, notifying, 28
 - Telephone connectors, 3, 5
 - Television interference, 35
 - Top view of GRiD Compass, 2
 - Traveling with GRiD Compass, 39
- Troubleshooting
- Hardware problem, 33
 - Software problem, 33, 35
 - Troubleshooting chart, 34
 - User problems, 33

Voltage

- 110/220 volts, 4

Updating the clock, 39

Warnings, 37

